


Operating Instructions for Model TN102B Infrared Thermometer

Thank you for purchasing our non-contact infrared thermometer. Please remember to keep away from children and don't use it for safety related applications.


Specifications:

- ☑ Temperature measurement range: -55 to +220°C (-67 to +428°F)
- ☑ Operating temperature range: -10 to +50°C (14 to +122°F)
- ☑ Accuracy (Tobj=-33~220°C, Tamb=23±3°C):
±2% of reading or ±2°C(4°F)
- ☑ Resolution(-9.9~199.9°C): 0.1°C/°F, otherwise 1°C/1°F (for thermometer); 0.01sec (for Stop Watch)
- ☑ Field of View: 1:1
- ☑ Emissivity Range: 0.95 default –adjustable 0.05 to 1
- ☑ Auto Room temperature while power off
- ☑ Auto real time Max data, Bar display, °C/°F Switch and Stop Watch function
- ☑ Battery Life: Typ.40 / Min.30 hours continuous use (auto power off after 15seconds), The battery life of the shelf =8month.
- ☑ Battery: one CR2032 lithium cell battery

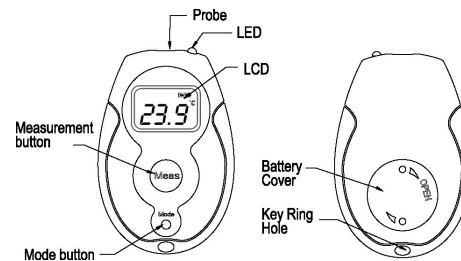

Auto Room temperature


Auto room temperature will show on the LCD while power off.

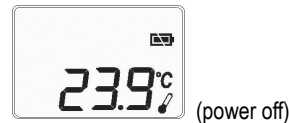

Use of the thermometer

(Always with the real time Max data)

- 1 Always make sure the probe is clean without any damage.
- 2 Power on: Press the "Meas. key".
- 3 Temperature taking: When you press the "Meas. key", will get the temperature immediately.

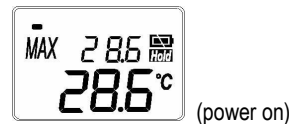

Note: The Distance:Spot is 1:1. Please make sure the target area is within the field of view.

Note: Applications include the Water, Milk, Cloth, Skin, or visit <http://www.ZyTemp.com> for further information.

- 4 **# Bar Display: the fixed setting range for bar display is 20~220°C and Center=120°C.**

The bar display will be updated comply with the measurement reading changed.




- 5 If you hold down the "Meas. key", the reading of measurement & bar display will be continuous updated.

The maximum reading of measurement will also be continuous updated on the right side of MAX icon while you hold down the "Meas. key".

- 6 Power off: Device will automatically power off if left idle for more than 15sec to extend battery life.

Use of the Stop Watch

- 1 Power on: Press the "Meas. key".
- 2 Press the "Mode key" and the "count" icon starts to flash.
- 3 For start or stop counting, press the "Meas. key". For reset counting, press the "Mode key".
- 4 Press "Mode key" to enter the thermometer function.

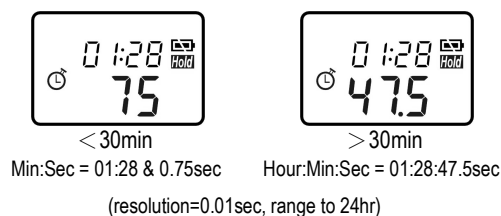

Other Functions

°C / °F → Power on and press the "Mode key" two times. When the °C icon flashes, press the "Meas. key" to change the scale to °F. The setting will be reserved even if power off.



Emissivity → Power on and press the "Mode key" three times. When the default emissivity "95E" appears, press the "Meas. key" to modify the emissivity setting. Press "Mode key" when complete. The setting will be reserved even if power off.



Battery replacement



Battery is low and no more measurements are possible.

The battery should be replaced immediately with a CR2032 lithium cell. The battery is located under the twist cover at the rear of thermometer. Please remember to power off the unit before replacing the battery.

⚠ A malfunction may occur if the power is on when the battery is replaced. If a malfunction occurs, restart the device. Keep the battery away from children.

Important notes

Storage & Cleaning: The sensor lens should be kept clean at all times and stored at room temperature.

1. Use only a soft cloth or cotton swab with water or medical alcohol when cleaning the lens.
2. Remember to allow the lens to fully dry before using.
3. The thermometer should be stored at -20 to +65°C (-4 to 149°F).

EMC/RFI: Readings may be affected if the unit is operated within radio frequency electromagnetic field strength of approximately 3 volts per meter, but the performance of the instrument will not be permanently affected.

Trouble shooting




'Hi' or 'Lo' is displayed when the temperature being measured is outside of the measurement range.

☑ Please select target within specifications. If a malfunction still exists, please contact the nearest retailer.



'Er2' is displayed when the thermometer is exposed to rapid changes in the ambient temperature. 'Er3' is displayed when the ambient temperature exceeds -10°C (14°F) or +50°C (122°F).

☑ The thermometer should be allowed plenty of time (minimum 30 minutes) to stabilize to the working/room temperature.



☑ For all other error messages it is necessary to reset the thermometer. To reset the thermometer, waiting for the instrument power off, remove the battery and wait for a minimum of one minute, reinsert the battery and turn on. If the error message remains please contact the Service Department for further assistance.

ZyTemp
A new way to measure temperature

Manufactured by Radiant Innovation Inc. Add: 1F, No.3, Industrial East 9th Road, Science-Based Industrial Park, HsinChu, Taiwan. [Http://www.ZyTemp.com](http://www.ZyTemp.com)
Tel: +886 (3) 5644185, Fax: +886- (3) 5644170, E-mail: Service@ZyTemp.com

Ref.No. : 032011

